## H TECHNICAL PROCEDURE VANTRAAX® HRRNT 40K / HRRT 50K

**SUBJECT:** Lifting Strap Gauge Instructions LIT NO: L880 DATE: September 2004

When the lifting straps are When the lifting straps are **not** properly installed, the gauge properly installed, the entire (figure 1) for verifying proper lifting strap installation will not engage the lifting strap connection (K-brace prevents gauge fits over the topmost lifting strap connection: gauge from being rotated): models. The gauge should be used at all four lifting Gauge contacts connection here °G0 "NO GO" GO / NO-GO gauge (part # S-28504) Ó 0  $\cap$ Lifting straps Lifting straps not properly installed properly installed  $\wedge$ 

Figure 2. The gauge in use

Information contained in this literature was accurate at the time of publication. Product changes may have been made after the copyright date that are not reflected.

Trailer Suspension Systems 2070 Industrial Place SE Canton, OH 44707-2600 USA

Trailer Suspension Systems 250 Chrysler Drive, Unit #3 Brampton, ON L6S 6B6 Canada 866.RIDEAIR (866.743.3247) 330.489.0045 Fax 800.696.4416

905 789 1030

Fax 905 789 1033

www.hendrickson-intl.com

The Boler Company Copyright © 2004 All Rights Reserved

## Figure 1. GO / NO-GO gauge (part number S-28504)

Hendrickson has developed a GO / NO-GO gauge

on all VANTRAAX HRRNT 40K and HRRT 50K

strap connections.

To use the gauge, simply slip it over the topmost lifting strap connection as shown in figure 2. When the lifting straps are properly installed, the topmost lifting strap is routed over the lower lifting strap connection as shown in figure 2 and the entire gauge fits over the topmost lifting strap connection (GO condition).

If the lifting straps are not properly installed, the gauge will not engage the topmost lifting strap connection (NO-GO condition). Refer to Hendrickson publication L765, VANTRAAX HRRNT 40K / HRRT 50K Maintenance Procedures, for proper lifting strap installation instructions. Although not obvious from the illustrations in figure 2, the suspension K-brace prevents the gauge from being rotated and delivering a false "GO" reading when the lifting straps are improperly installed.