

HUS® WHEEL-END INSPECTION PROCEDURE

Inspect HUS® wheel ends as follows to maintain proper operating condition and factory warranty:

WITH WHEEL-END MONITOR (WEM™) — INSPECT EVERY 2-4 WEEKS


- Check bearing condition by holding a magnet to the WEM. A blinking LED indicates bearing condition:

GREEN — Bearings operating properly

RED — Damage detected*

RED and GREEN — WEM malfunction*

*Contact Hendrickson at 866-743-3247 in the US or
800-668-5360 in Canada for further details.

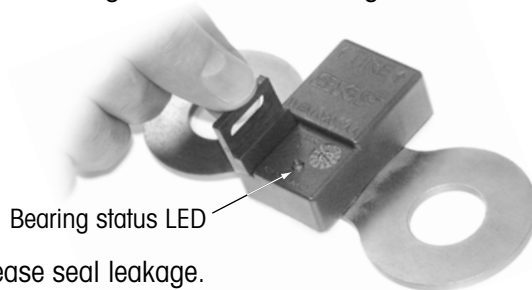

WITHOUT WEM — INSPECT EVERY 3 MONTHS

- Visually inspect the back of the hub and the hubcap for grease seal leakage. Refer to Hendrickson publication **L496, Wheel-End Maintenance Procedures** for complete grease seal and other inspection details.
- Rotate the wheel in both directions to check for free, smooth and quiet rotation. If the wheel-end feels rough, sounds noisy or does not rotate freely, contact Hendrickson for further assistance.

Trailer Suspension Systems
2070 Industrial Place SE
Canton, OH 44707-2600 USA
330.489.0045
Fax 800.696.4416

HENDRICKSON

Trailer Suspension Systems
250 Chrysler Drive, Unit #3
Brampton, ON L6S 6B6 Canada
905.789.1030
Fax 905.789.1033