

INTRAAX® SUSPENSION SAFETY


⚠ CAUTION

IMPROPER AIR SPRING PRESSURE CAN CAUSE DAMAGE TO THE VEHICLE OR SUSPENSION OR SEVERE PERSONAL INJURY. **DO NOT OPERATE THE VEHICLE WITHOUT AIR PRESSURE IN AIR SPRINGS.** Lower trailer onto internal air spring bumpers if it is supported by the landing gear legs and parked with a payload for any length of time. Lower the trailer onto internal air spring bumpers for safe loading and unloading.

INTRAAX SUSPENSION INSPECTIONS

Inspect the following items during regular vehicle maintenance:

- Vehicle frame, suspension beams, brackets and other structural components for cracks or other damage
- All fasteners for proper torque or damage
- All welds for cracks or other damage
- Air springs for chafing, rubbing or damage
- Shock absorbers/ZMD® down-stops for leaks and/or damage
- Suspension ride height

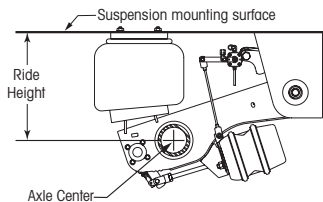

INTRAAX TORQUE SPECIFICATIONS

QUIK-ALIGN® Pivot Bolt: 550±45 ft. lbs. (750±50 Nm)

Shock Bolt (Upper and Lower): 225±10 ft. lbs. (300±10 Nm)

Do not reuse bolts. For more torque specifications, refer to Hendrickson publication B31. For pivot connection fastener information, refer to Hendrickson publication B92. All Hendrickson publications can be found online at www.hendrickson-intl.com.

⚠ CAUTION

DO NOT APPLY anti-seize compound or additional lubricant to pivot connection hardware. This can lead to overtightened fasteners, unpredictable pivot connection clamp loads and unreliable axle alignments. Reference L579.

Trailer Commercial Vehicle Systems
2070 Industrial Place SE
Canton, OH 44707-2641 USA
866.RIDEAIR (743.3247)
330.489.0045
FAX 800.696.4416

HENDRICKSON

www.hendrickson-intl.com

Hendrickson Canada
250 Chrysler Drive, Unit #3
Brampton, ON Canada L6S 6B6
905.789.1030
FAX 905.789.1033