

**MANUAL OR ELECTRIC EXHAUST  
OPERATING INSTRUCTIONS**

**⚠ CAUTION**

- **DO NOT OPERATE** vehicle without air pressure in the air springs.
- **For safe vehicle loading and unloading, lower the vehicle onto the air spring internal bumper.**

**NORMAL OPERATION**

When vehicle is in motion, open the valve, so air springs receive air from the height control valve.

**VEHICLE LOWERING**

To lower the vehicle onto the air spring internal bumper, close the exhaust valve.



L645 June 1998 Printed in United States of America