

## TO MANUALLY CHECK TIRE PRESSURE

1. **Disconnect** tire hose at hubcap.

Use a conventional gage to **measure** tire pressure at hose end as shown on right.
Align hose with hubcap port and **tighten** nut. Ensure nut is snug.

Refer to Hendrickson publication T51002 TIREMAAX Installation, Service and Troubleshooting Procedures for complete system details.



T50018 Rev A 09-14 ECN 23288