


# MaxiLift® Trailer Suspension/MaxiLok® Trailer Support System Operating Instructions

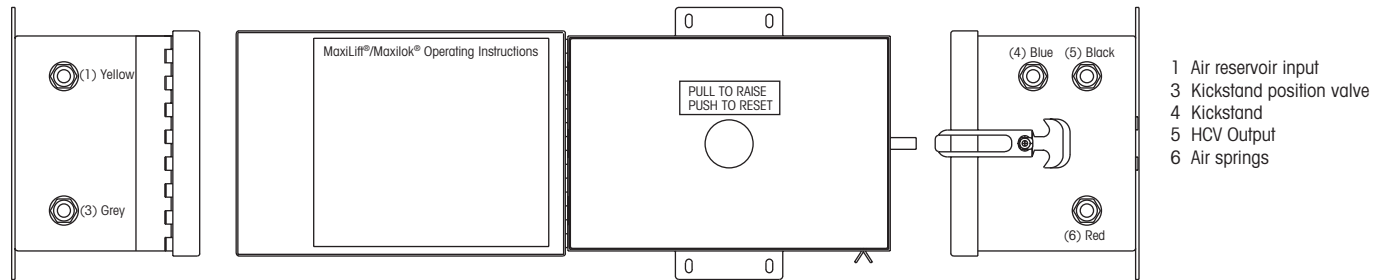

## **Raise and Lock:**

1. Set the vehicle parking brakes.
2. With the tractor running, pull the valve out.
3. Release the trailer parking brakes only.
4. After the trailer has stopped rising and the support stands are over the axle, set the parking brakes.
5. Verify that both support stands have swung into position over the axle and the air springs have exhausted.

**NOTE:** If support stands do not raise off the axle, the suspension is overloaded or the air supply is too low.

## **Unlock and Lower:**

1. With the tractor running, push the valve in.
2. Release the trailer parking brakes and allow the trailer to return to ride height.
3. Verify that both support stands are clear of the axle and in the disengaged position.

**NOTE:** Before operating the vehicle, ensure that the trailer has returned to the proper ride height.

## **⚠ CAUTION**

**DO NOT attempt to load or unload the trailer without having both support stands resting on the axle. Equipment damage and/or personal injury may occur.**

If you have any questions concerning the operation of this system, refer to the operating manual or contact the Hendrickson technical service department at 800-455-0043 in the United States or 800-668-5360 in Canada.

Trailer Suspension Systems  
2070 Industrial Place SE  
Canton, OH 44707-2600 USA  
800.455.0043  
330.489.0045  
Fax 800.696.4416

**HENDRICKSON**

Trailer Suspension Systems  
250 Chrysler Drive, Unit #3  
Brampton, ON L6S 6B6 Canada  
905.789.1030  
Fax 905.789.1033