

MaxiLift® Operating Instructions

Raise the trailer:

1. Set vehicle parking brakes.
2. With the tractor running, pull out the "Raise" valve.
3. Release the trailer parking brakes only.
4. After the trailer has stopped rising and maximum designed air pressure is achieved, set the parking brakes.

Lower the trailer:

1. Release the trailer parking brakes.
2. Push in the "Raise" valve.
3. After the trailer has lowered to ride height, set the parking brakes.
4. Ensure that the trailer has returned to the proper ride height.

If you have any questions concerning the operation of this system, refer to the operating manual or contact Hendrickson Trailer Suspension Systems at 330-456-7288.