## HTECHNICAL PROCEDURE

## TRAILER SUSPENSION SYSTEMS


**SUBJECT:** Reapplying Axle Sealant Procedure

LIT NO: L839

**DATE:** June 2007 **REVISION:** A

Before an integrated suspension system leaves our facility, Hendrickson Trailer Suspension Systems applies a sealant to the axle around the axle wrap and to the pilot hole at the bottom of the axle wrap (figure 1). The purpose of this sealant is to help prevent crevice corrosion between the axle and the axle wrap.

After leaving our facility, some suspensions may undergo a media blasting process in preparation for final painting by trailer manufacturers. During this practice, the factory-applied axle sealant inadvertently gets removed along with any dirt, grease, rust and other targets of the blasting process. To help prevent crevice corrosion and to help avoid any potential situations that would affect the suspension warranty, Hendrickson strongly recommends that the axle sealant be reapplied before final priming and painting. The following illustration outlines the proper procedure for reapplying axle sealant after media blasting.

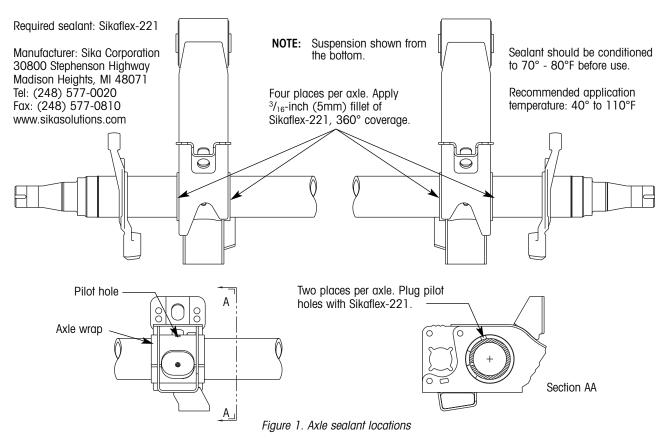

www.hendrickson-intl.com

## HENDRICKSON

Trailer Suspension Systems 250 Chrysler Drive, Unit #3 Brampton, ON Canada L6S 6B6 905.789.1030 Fax 905.789.1033 Trailer Suspension Systems 2070 Industrial Place SE Canton, OH 44707-2641 USA 866.RIDEAIR (743.3247) 330.489.0045 Fax 800.696.4416 Trailer Suspension Systems Av. Industria Automortriz #200 Parque Industrial Stiva Aeropuerto Apodaca, N.L., México C.P. 66600 (52) 81 8288 1300 Fax (52) 81 8288 1301