

TECHNICAL BULLETIN

TIREMAAX® TIRE INFLATION SYSTEM

SUBJECT: Manually Checking Tire Pressure

LIT NO: B117

DATE: November 2005

When manually checking tire inflation pressure on TIREMAAX-equipped suspensions, always disconnect the tire hose from the tee fitting and check tire pressure at the hose end (figure 1).

When manual pressure check is complete, reattach and firmly tighten the tire hose to the tee fitting. Do not overtighten using excessive force.

 **WARNING: TO PREVENT INJURY, ALWAYS WEAR EYE PROTECTION WHEN**

MAINTAINING OR SERVICING THE TIREMAAX SYSTEM.

NOTE: Check valves in the tire hoses help prevent air loss when a tire hose is disconnected. However when the system is powered, you may experience air loss at the tee fitting. In this case, a blink code will occur if the tire hose is disconnected during a system tire pressure check.

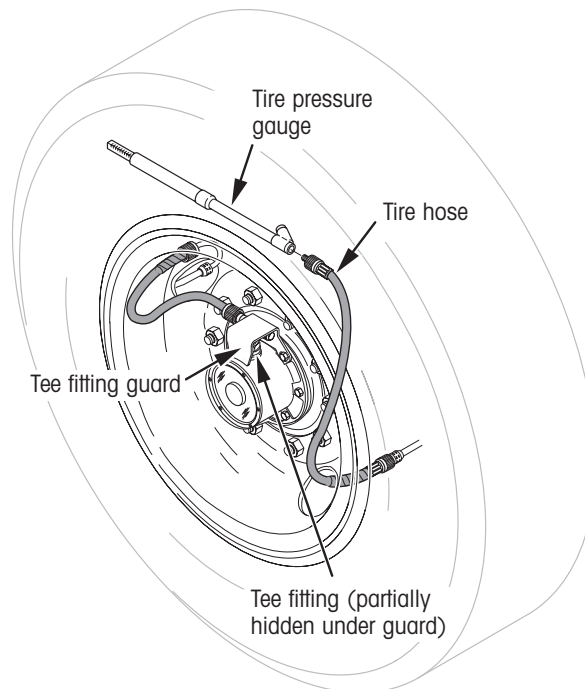


Figure 1. Manually check tire pressure at the hose end, not at the valve stem

www.hendrickson-intl.com

HENDRICKSON

Trailer Suspension Systems
250 Chrysler Drive, Unit #3
Brampton, ON Canada L6S 6B6
905.789.1030
Fax 905.789.1033

Trailer Suspension Systems 866.RIDEAIR (743.3247)
2070 Industrial Place SE 330.489.0045
Canton, OH 44707-2641 USA Fax 800.696.4416

Trailer Suspension Systems
Av. Industria Automotriz #200
Parque Industrial Silva Aeropuerto
Apodaca, N.L., México C.P. 66600
(52) 81 8288 1300
Fax (52) 81 8288 1301