## **Air Disc Brake Maintenance Tips**

## **INSPECTION CYCLE**

6 MONTH	12 MONTH	EVERY PAD EXCHANGE
3 MONTH	6 MONTH	EVERY PAD EXCHANGE
WHEEL ON	WHEEL OFF	
X	X	
		X
X	X	X
X	X	X
	X	X
	3 MONTH WHEEL ON X X X X	3 MONTH6 MONTHWHEEL ONXXXXXXXXXXXXXX

\* A ruler or tape measure can be used in place of the Hendrickson Wear Indicator Tool if needed. To order wear indicator tools or other parts, call 1.866. RIDEAIR (743.3247) \*\* Reference T72009, MAXX22T Installation and Maintenance Procedure for detailed instructions. https://www.hendrickson-intl.com/Trailer



1.866.RIDEAIR (743.3247) www.hendrickson-intl.com The World Rides On Us



Helping you work more efficient.











Our **Engineered for Efficiency**<sup>™</sup> philosophy yields some of the most innovative products and services in the transportation industry. Whether you're buying a Hendrickson suspension system, Genuine Parts or using one of our many online services, rest assured we engineer, design, manufacture and offer **MAAXUPTIME**<sup>™</sup> resources and solutions to help you work more efficient.

## MAAXUPTIME.COM . . . it's all at your fingertips.





