

WARNING

DO NOT REMOVE LIFTING STRAP HARDWARE FROM FLANGE PLATE WHEN COIL SPRING IS UNDER TENSION. Doing so could cause unexpected, sudden and violent movement of suspension parts that can result in serious injury or property damage. Refer to Hendrickson publication L765, VANTRAAX® HRRNT 40K / HRRNT 50K Maintenance Procedures, for complete coil spring tension releasing instructions.

Trailer Suspension Systems
2070 Industrial Place SE
Canton, OH 44707-2600 USA
800.455.0043
330.489.0045
Fax 800.696.4416

 **HENDRICKSON**

Trailer Suspension Systems
250 Chrysler Drive, Unit #3
Brampton, ON L6S 6B6 Canada
905.789.1030
Fax 905.789.1033