

HENDRICKSON TECHTIPS

“Keeping the spring in air springs”

Air springs are an integral part of the suspension and need to be inspected regularly to help ensure optimal vehicle performance. Replacing Hendrickson air springs with anything other than genuine Hendrickson springs can alter the performance of the suspension, and can lead to problems with load equalization, suspension damage and poor ride quality.

To help ensure peak performance and long life from your air springs . . .

- ✓ Make sure your suspensions are set to the proper ride height
- ✓ Never operate your vehicle without air in the air springs
- ✓ Keep the air spring pistons free of dirt and debris
- ✓ Keep the areas around each air spring clear of other vehicle components or items that can contact the rubber air spring bellows
- ✓ Always insist on genuine Hendrickson air springs when servicing your Hendrickson suspension



Genuine Hendrickson air springs are easily identified by the Hendrickson name and logo on each air spring bellows.

**Remember – there's only one way to ensure the suspension's original performance
– ask for Hendrickson Genuine Parts by name.**

For more technical information, go to www.hendrickson-intl.com/literature/pdfs_tech_tips.asp

For The Road Ahead™

H HENDRICKSON