

Air Disc Brake Maintenance Tips

	INSPECTION CYCLE		
ON-HIGHWAY APPLICATION	6 MONTH	12 MONTH	EVERY PAD EXCHANGE
OFF-HIGHWAY / VOCATIONAL APPLICATION	3 MONTH	6 MONTH	EVERY PAD EXCHANGE
	WHEEL ON	WHEEL OFF	
Inspect the pad thickness using Hendrickson's Wear Indicator Tool*	X	X	
Inspect the rotors for cracks and condition of friction surface	X		X
Inspect that the caliper moves freely on guide pins and check adjuster operation – Ref. T72009**	X	X	X
Check for adequate slack in air-lines	X	X	X
Check for damages or cracks to the boots, seals and end caps		X	X

* A ruler or tape measure can be used in place of the Hendrickson Wear Indicator Tool if needed. To order wear indicator tools or other parts, call 1.866. RIDEAIR (743.3247)
 ** Reference T72009, MAXX22T Installation and Maintenance Procedure for detailed instructions. <https://www.hendrickson-intl.com/Trailer>



1.866.RIDEAIR (743.3247)
www.hendrickson-intl.com

HENDRICKSON
The World Rides On Us®

MAAXUPTIME™

Helping you work more efficient.




Our **Engineered for Efficiency™** philosophy yields some of the most innovative products and services in the transportation industry. Whether you're buying a Hendrickson suspension system, Genuine Parts or using one of our many online services, rest assured we engineer, design, manufacture and offer **MAAXUPTIME™** resources and solutions to help you work more efficient.

MAAXUPTIME.COM . . . *it's all at your fingertips.*

L1318 04-20

©2020 Hendrickson USA, L.L.C. All Rights Reserved. All trademarks shown are owned by Hendrickson USA, L.L.C., or one of its affiliates, in one or more countries.

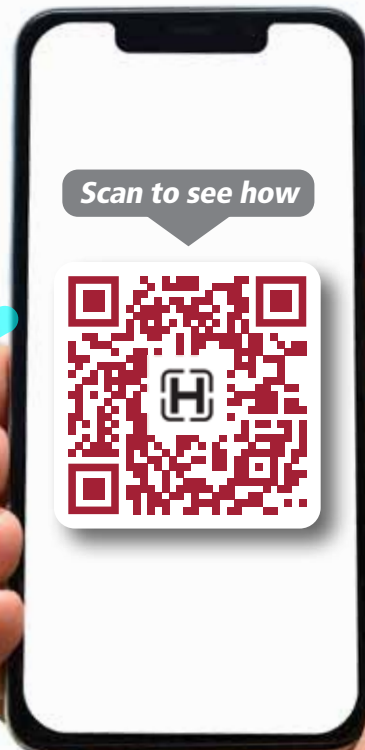

HENDRICKSON
Genuine Parts