HPARTS LIST

ULTRAA-K® UTKNT 40K


LIT NO: L1237

DATE: October 2019 **REVISION**: G






SLIDER BOX ASSEMBLY

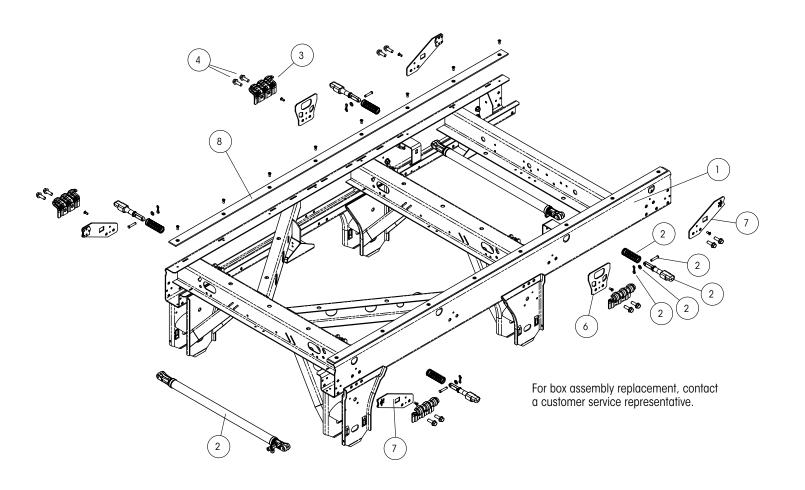

MUD FLAP MOUNTING

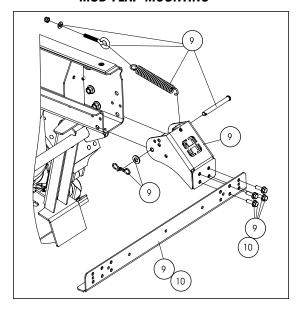

2 L1237 Rev G



SLIDER BOX ASSEMBLY


			SYSTEM		
ITEM	DESCRIPTION	PART NO.	QTY.	NOTE	
1	AFTERMARKET SLIDER BOX REPLACEMENT	AMBOX.###	1	Contact Hendrickson for assistance	
2	QUIK-DRAW® COMPONENTS			See L751 QUIK-DRAW Parts List	
3	BODY RAIL CLIP				
	3.4" clip height	S-24459	4	Use with 4" hole centers	
	3.8" clip height	S-24460	4	Use with 6" hole centers	
4	BODY RAIL BOLT	SA-6900-2	8	1/2"-13" × 1-1/2" flanged bolt	
5	BODY RAIL CLIP SPACER (Units built before August 2015) (not shown)				
	1.5" clip hole centers	A-21282	4		
	2" clip hole centers	A-22367	4		
6	BOLT-ON SHIM				
	.188" thickness	S-34860	4	6" body rail hole spacing	
	.188" thickness	S-34860	2	4" body rail hole spacing	
	.232" thickness	S-34859	4	6" body rail hole spacing	
	.232" thickness	S-34859	2	4" body rail hole spacing	
7	BOLT-ON END STOP (4" body rail hole spacing only)				
	.188" thickness	S-34821-1	2	Left front rail and right rear rail	
	.188" thickness	S-34821-2	2	Right front rail and left rear rail	
	.232" thickness	S-35761-1	2	Left front rail and right rear rail	
	.232" thickness	S-35761-2	2	Right front rail and left rear rail	
8	SLIDER WEAR PAD KIT	S-14342-3	2	Includes (1) slider wear pad with fasteners	
9	MUD FLAP BRACKET KIT	S-34886	2	Includes (1) mud flap bracket assembly, (1) mud flap angle and hardware	
10	MUD FLAP ANGLE KIT	S-35021	2	Includes (1) mud flap angle and hardware	

Note: Identification can be found on the roadside slider box rail above the front frame bracket. There will also be a blank ULTRAA-K tag on the inside of the curbside beam.



SUSPENSION ASSEMBLIES

ZMD DOWN STOP BEFORE MARCH 2017 NO LONGER AVAILABLE

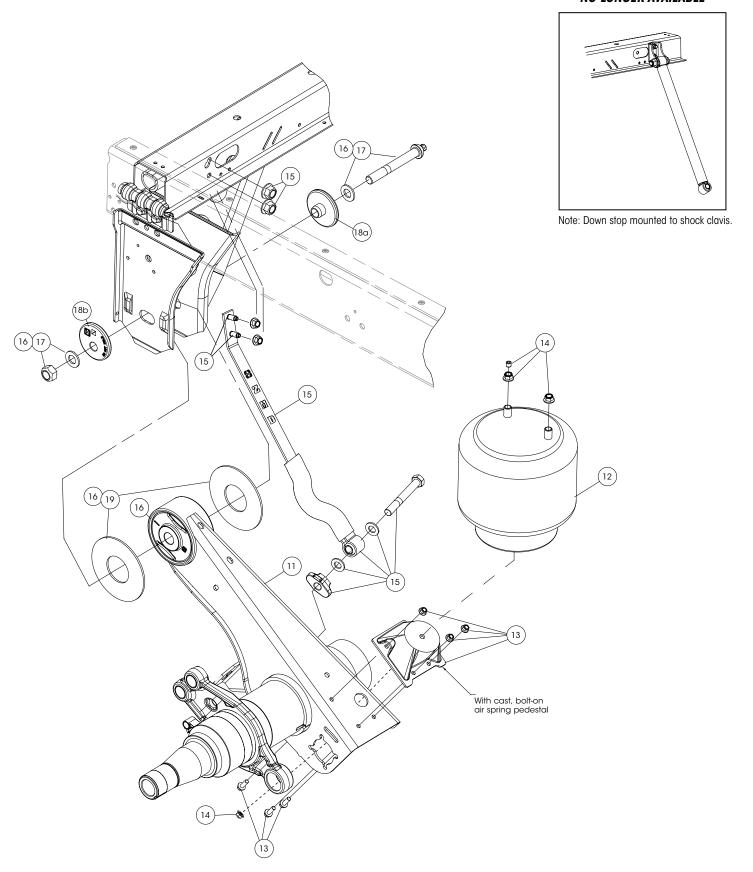



	PENSION ASSEMBLIES	DART NO	SYSTEM	NOTE
ITEM	DESCRIPTION	PART NO.	QTY.	NOTE
11	HALF-TRAAX AXLE/BEAM WELDMENT	HTRAAX.###	2	Contact Hendrickson for assistance
12	ZMD® AIR SPRING¹		4	
	Units built before March 2019	S-34733	4	Straight piston
	Units built after March 2019	S-38000	4	Flared piston
13	CAST AIR SPRING PEDESTAL KIT	S-27447-1	2	2" pedestal; includes left and right sid pedestals and fasteners
14	AIR SPRING MOUNTING KIT (per air spring)	S-22619/2	4	16" ride height
15	ZMD DOWN STOP KIT	S-40231-1	4	Includes down stop and hardware; Use this kit if replacing an old style downstop
16	TRI-FUNCTIONAL® PIVOT BUSHING KIT ²	S-26321	2	Includes (2) bushings, (2) pivot bolt kits, (4) bushing tube spacers and lubricant pack
17	QUIK-ALIGN® PIVOT BOLT KIT	S-24705	4	Contains 7" bolt, nut and hardened washers
18	QUIK-ALIGN ALIGNMENT COLLARS			
	18a Concentric (inner)	S-20924	4	Pivot bolt hole is centered
	18b Eccentric (outer)	S-20925	4	Pivot bolt hole is offset from center
19	BUSHING TUBE SPACER	S-26807	8	Inner metal outer diameter dimensior of TRI-FUNCTIONAL Bushing is 2.6"; Inner hole dimension of BTS 2.95"
20	AIR TANK BRACKET KIT (not shown)			
		S-34883	1	1 (2) air tank brackets, (4) hex flange scews and (4) prev-torq hex flange nu
		S-34883/2	2	(1) air tank bracket, (2) hex flange scews and (2) prev-torq flange nuts
21	HEIGHT CONTROL VALVE KITS (not shown)			See L1182 Control Parts Catalog
	Valves with fittings	VS-33704-3	1	
	HCV with dump	VS-33705-3	1	
	HCV with DST®	VS-33703-3	1	
	Link and valves with fittings	VS-33704-1	1	
	HCV with dump	VS-33705-1	1	
	HCV with DST	VS-33703-1	1	
22	FIXED LINK ASSEMBLY ³ (not shown)	VS-33702-1	1	
23	SHOCK SPACER (not shown)	S-27196	4	Included in down stop kit

^{1.} If replacing S-34733 ZMD air spring with S-38000, all air springs on the suspension must be changed to S-38000 ZMD air spring.

OTHER PARTS LISTS

More information can be found in the following documents

Lit. Number	Description
L1055	SURELOK® Parts List
L1102	Slider Accessories and Axle Components Parts List
L949	Wheel-Ends & Brakes Parts List
L589	TRI-FUNCTIONAL® Bushing Replacement Tool
L1104	Brake Kits and Components Parts List

^{2.} Bushing tool S-24736 is required to correctly rebush the suspension.

^{3.} Also included in HCV kits.

ULTRAA-K® UTKNT 40K PARTS LIST	<u></u>
NOTES	

L1237 Rev G

<u>H</u>	ULTRAA-K® UTKNT 40K PARTS LIST

ULTRAA-K® UTKNT 40K PARTS LIST	<u></u>
NOTES	
NOTES:	

Actual product performance may vary depending upon vehicle configuration, operation, service and other factors.

All applications must comply with applicable Hendrickson specifications and must be approved by the respective vehicle manufacturer with the vehicle in its original, as-built configuration.

Contact Hendrickson for additional details regarding specifications, applications, capacities, and operation, service and maintenance instructions.

Call Hendrickson at 330.489.0045 or 866.RIDEAIR (743.3247) for additional information.



www.hendrickson-intl.com

TRAILER COMMERCIAL VEHICLE SYSTEMS

2070 Industrial Place SE Canton, OH 44707-2641 USA 866.RIDEAIR (743.3247) 330.489.0045 • Fax 800.696.4416 Hendrickson Canada

250 Chrysler Drive, Unit #3 Brampton, ON Canada L6S 6B6 800.668.5360 905.789.1030 • Fax 905.789.1033 Hendrickson Mexicana

Circuito El Marqués Sur #29 Parque Industrial El Marqués Pob. El Colorado, Municipio El Marqués, Querétaro, México C.P. 76246 +52 (442) 296.3600 • Fax +52 (442) 296.3601